DC+, DC- and FOGRod RETURN ROUTING AND CONNECTIONS
ALTERNATE METHOD

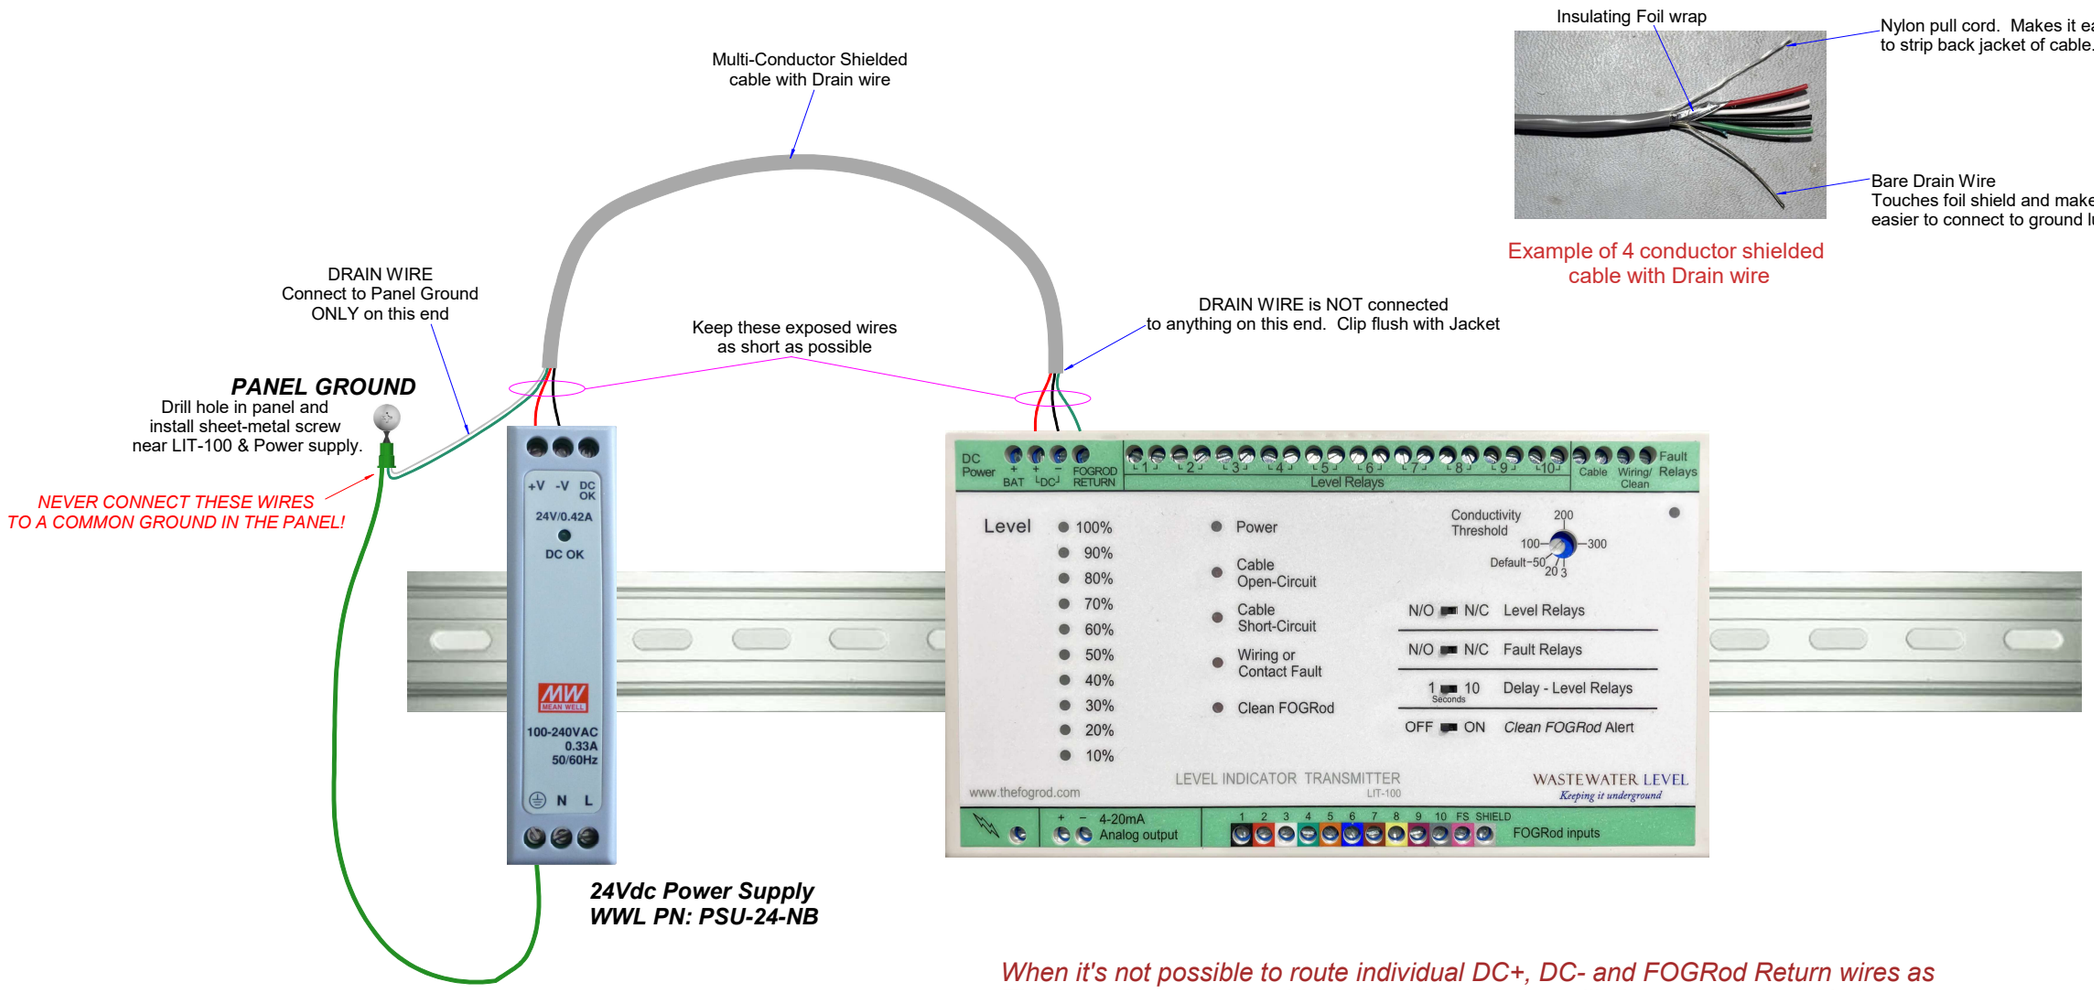

Example of 4 conductor shielded cable with Drain wire

When it's not possible to route individual DC+, DC- and FOGRod Return wires as TN11 requires, using a shielded cable as shown will allow routing in cable trays with AC power wires. Tightly bundling with AC power wires is still NOT permitted.